



XD622W

INSTALLATION/OWNERS MANUAL

AM/FM/CD Weather Receiver





Preparation


Please read entire manual before installation.

Before You Start

- Disconnect negative battery terminal. (consult a qualified technician for instructions)
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.


Getting Started

- Remove 2 transit screws located on top of the unit.
- Insert the supplied keys into the slots as shown, and slide the unit out of the mounting sleeve.
- Install mounting sleeve into opening, bending tabs to secure.
- Connect wiring harness and antenna. (consult a qualified technician if you are unsure)
- Certain vehicles may require an installation kit and/or wiring harness adapter (sold separately).
- Test for correct operation and slide the unit into mounting sleeve to secure.
- Snap trim ring into place.

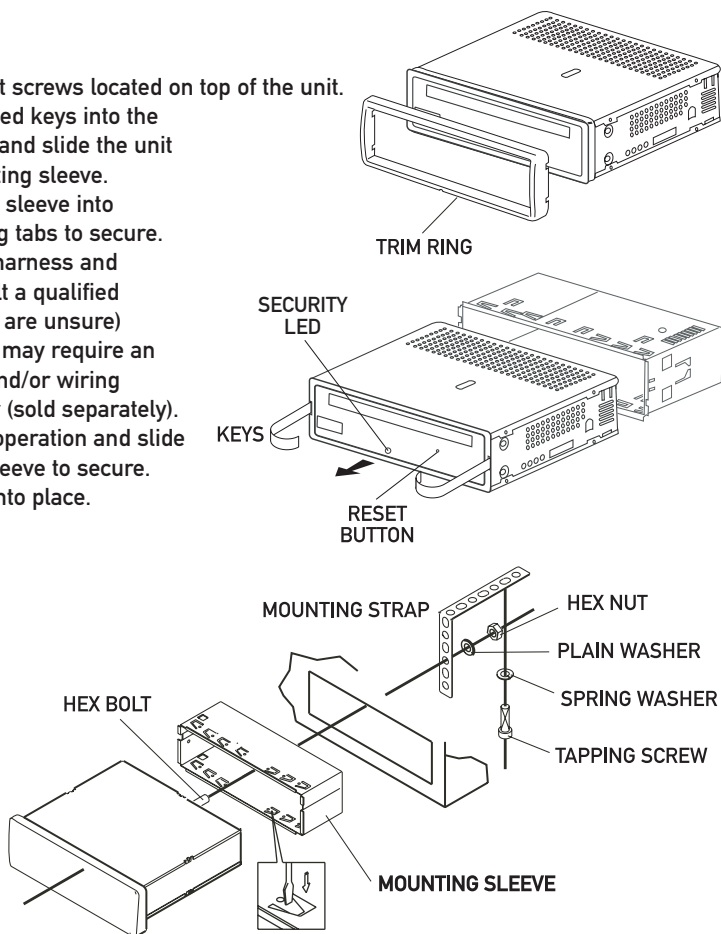

TYPICAL MOUNTING METHOD

Wiring Diagram

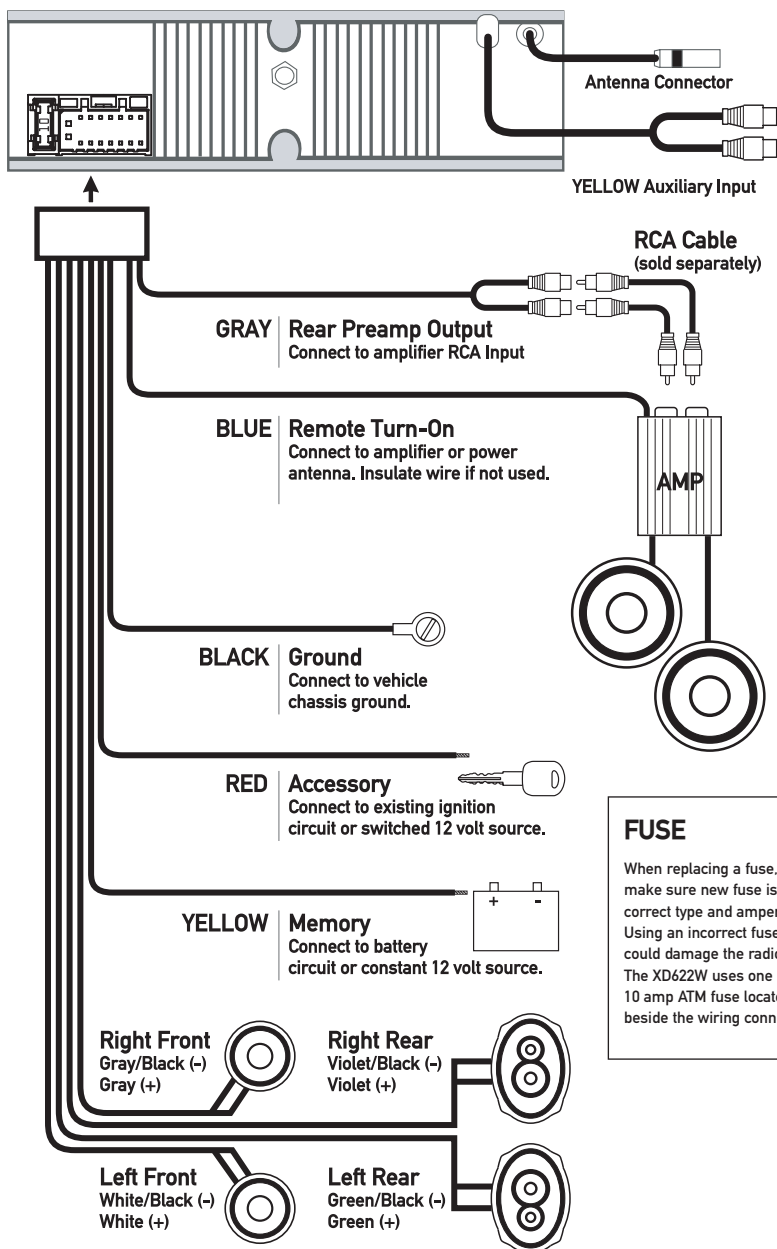


FUSE

When replacing a fuse, make sure new fuse is the correct type and amperage. Using an incorrect fuse could damage the radio. The XD622W uses one 10 amp ATM fuse located beside the wiring connector.



XD622W OPERATION

Control Locations

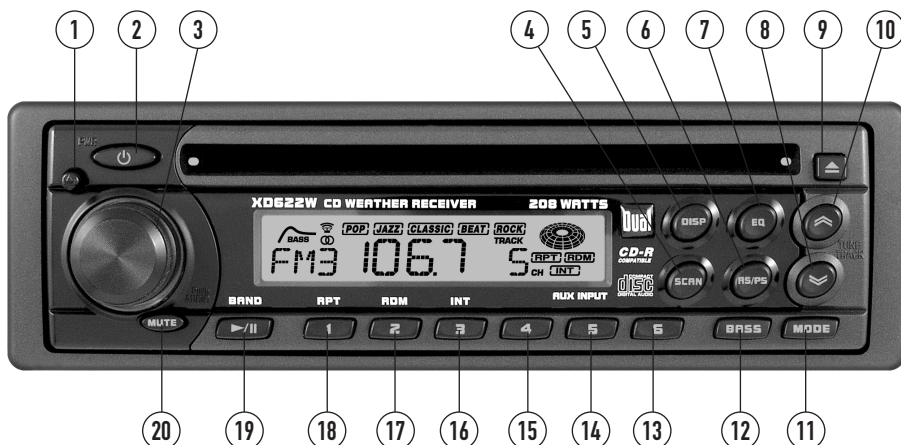



- | | |
|----------------------|----------------------|
| ① Release | ⑪ Mode |
| ② Power | ⑫ Bass Boost |
| ③ Audio | ⑬ Preset 6 |
| ④ Scan | ⑭ Preset 5 |
| ⑤ Display | ⑮ Preset 4 |
| ⑥ Auto Store/Presets | ⑯ Preset 3/CD Intro |
| ⑦ EQ | ⑰ Preset 2/CD Random |
| ⑧ Tune/Track Down | ⑱ Preset 1/CD Repeat |
| ⑨ Eject | ⑲ Play/Pause/Band |
| ⑩ Tune/Track Up | ⑳ Mute |

*Semi-permanent Faceplate Attachment

For semi-permanent faceplate installation, remove trim ring and install supplied Phillips head #1 screw through left side of mounting frame into faceplate.






General Operation






 


Faceplate Removal	Press RELEASE and pull away from the left side to remove. To re-install, insert right side of faceplate first then push left side to secure.
Power On/Off	Press PWR or any other button (except eject) to turn the unit on. Inserting a CD will turn the unit on automatically. Press PWR to turn the unit off.
Mode	Press MODE to select between AM/FM tuner, weatherband tuner, CD player and auxiliary input. Modes of operation are indicated in the display.
Bass Boost	Press BASS to activate and deactivate bass boost curve. Activating this feature will enhance the bass frequencies when listening to music at all volumes.
Volume	Adjust volume using rotary encoder (00-46).
Programmable Turn-On Volume	Press and hold PWR for 3 seconds to program currently selected volume level.
Confirmation Beep	Press rotary encoder for 3 seconds to turn confirmation beep on/off.
Mute	Press MUTE to silence the audio. Press MUTE again to cancel.
Preset EQ Curves	Press EQ to select between POP , JAZZ , CLASSIC , BEAT , ROCK and OFF (default) equalization curves. Any adjustment to the Bass or Treble settings automatically cancels the current EQ curve.
Display	Press DISP to select between clock and radio frequency (tuner mode) or CD track/elapsed time (CD player mode).
Set the Clock	With the unit on, press and hold DISP until clock begins to flash, then release. Press TUNE  to adjust the hours and TUNE  to adjust the minutes. Press DISP momentarily to save the selected time.
12/24-hour Clock	The clock will display 12-hour AM/PM time in U.S. frequency spacing mode (PM 10:00). In European frequency spacing mode, the clock will display 24-hour time (22:00).



General Operation

Programmable Display Priority	<p>Press and hold DISP then press TUNE  to select radio frequency (tuner mode) or CD track/ elapsed time (CD player mode) display priority (default). Clock is accessed by pressing DISP momentarily.</p> <p>Press and hold DISP then press TUNE  to select clock display priority. Radio frequency or CD track/elapsed time is accessed by pressing DISP momentarily.</p>
Programmable Clock Priority	<p>Programs unit to display clock/no clock when unit is off. Press and hold MODE then press PRESET 1 to turn clock priority on/off.</p>
Reset	<p>Press and hold for more than 2 seconds to RESET the unit upon initial installation or if abnormal operation occurs. The RESET button is located behind the faceplate.</p>
Audio	<p>Press rotary encoder to select between Volume (default), Bass, Treble, Balance & Fader.</p> <div></div>
Bass	<p>Press rotary encoder until BASS appears Rotate encoder left/right to adjust (+6 maximum / -6 minimum)</p>
Treble	<p>Press rotary encoder until TRE appears Rotate encoder left/right to adjust (+6 maximum / -6 minimum)</p>
Balance	<p>Press rotary encoder until BAL appears Rotate encoder left/right to adjust (L12-0-R12) 00 represents equal balance.</p>
Fader	<p>Press rotary encoder until FAD appears Rotate encoder left/right to adjust (F12-0-R12) 00 represents equal fader.</p>
Source Audio Memory	<p>Individual Bass and Treble settings are retained in memory for AM, FM, Weatherband, CD and AUX modes.</p>



AM/FM Tuner Operation

Seek Tuning	Press TUNE  or  momentarily to seek the next strong station.
Manual Tuning	Press TUNE  or  for more than 2 seconds, then release. "MANU" will momentarily appear in the display. Press TUNE  or  momentarily to move radio frequency up or down one step at a time. Press and hold to advance quickly. If tuning is not adjusted for 5 seconds, the unit will return to seek tuning mode (default). "AUTO" will momentarily appear in the display.
Scan Tuning	Press SCAN to preview strong stations on the current band, pausing for 5 seconds at each. Press SCAN again to cancel.
Band	Press BAND to select between FM1, FM2, FM3 and AM1, AM2 bands.
Frequency Spacing	Press and hold BAND then press TUNE  to select European frequency spacing. Press and hold BAND then press TUNE  to select U.S. frequency spacing (default). Anytime frequency spacing is changed, all station presets are erased.
Storing and Recalling Station Presets	Up to 18 FM stations and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button for more than 2 seconds. When stored, the preset number will appear in the display. The station can be recalled anytime by pressing the corresponding preset button.
Automatically Store Stations	Press AS/PS for more than 3 seconds to automatically store the six strongest stations in the current band. Automatic Local/Distance is activated during the initial band scan.
Preset Scan	Press AS/PS to scan presets 1-6 on the current band, pausing for 5 seconds at each. Press AS/PS again to cancel.



Weatherband Tuner Operation

Manual Tuning

Press **TUNE**  or  momentarily to seek the next weatherband station.








Direct Tuning

Press preset 1~6 or **BAND** to directly access the 7 weatherband stations. Refer to the table below.

Weatherband Stations - Direct Tuning Table

Button	WB Frequency	LCD Display
Preset 1	162.400 MHz	Wb - 1
Preset 2	162.425 MHz	Wb - 2
Preset 3	162.450 MHz	Wb - 3
Preset 4	162.475 MHz	Wb - 4
Preset 5	162.500 MHz	Wb - 5
Preset 6	162.525 MHz	Wb - 6
BAND	162.550 MHz	Wb - 7

CD Player Operation

Insert CD	With the label facing up, insert a standard size CD into the CD slot. The CD will automatically begin playback.
Eject CD	Press the EJECT button to stop and eject the CD. The unit will change to previous mode of operation (AM/FM tuner, Weatherband tuner or auxiliary input). If the disc is not removed within 10 seconds, the unit will reload the disc. The unit does not have to be turned on to eject CD.
Track Select	Press TRACK  to skip to the beginning of the next track. Press TRACK  to return to the beginning of the current track. Pressing TRACK  again skips to the beginning of the previous track.
Fast Forward and Reverse	Press and hold TRACK  or TRACK  to fast forward or reverse a track.
Pause	Press  to temporarily stop CD playback. Press  again to resume playback.
Intro	Press INT to play the first 10 seconds of each track. Press INT again to cancel.
Repeat	Press RPT to continuously repeat selected track. Press RPT again to cancel.
Random	Press RDM to play all tracks in random order. Press RDM again to cancel. Random mode is retained in memory when selecting between modes and when the unit is turned on/off.
CD-R Compatibility	Some CD-Rs may be incompatible with this unit, depending on media type and recording method. This model does not support CD-RWs.



Limited One-Year Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Namsung America Inc. warrants this product to the original purchaser to be free from defects in material and workmanship, under normal conditions, for a period of one year from the date of the original purchase.

Namsung America agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new or renewed product in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase.

During the One-Year Warranty Period: For One Year from the date of purchase, your product will be replaced with a new, renewed or comparable product (whichever is deemed necessary) if it becomes defective or inoperative. This is done without charge to you. Replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A., in the 48 contiguous states ONLY.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product.

What to do?

1. Before you call for service, check your operating instructions. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with proof of the purchase date from the retailer to the Return Center address listed below.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. DUAL will pay the return shipping charges if the product is returned to an address within the USA.

Namsung America Inc.
Attn: Returns Center
21318 64th Ave. South
Kent, WA 98032 U.S.A.
Toll Free: 1-866-626-7863

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

Specifications

CD Player	Signal-to-noise: >92dB Frequency response: 10Hz-20kHz Channel separation @ 1kHz: >65dB D/A converter: 1 Bit
FM Tuner	Tuning range: 87.5MHz-107.9MHz Usable sensitivity: 8.5dBf 50dB quieting sensitivity: 10dBf Stereo separation @ 1kHz: 40dB Frequency response: 30Hz-13kHz
AM Tuner	Tuning range: 530kHz-1710kHz Usable sensitivity: 22uV Frequency response: 30Hz-2.2kHz
Wetherband Tuner	Tuning range: 162.400MHz-162.550MHz
General	Total power output: 208 Watts Peak Power output: 52Wx4 @ 4 ohms, 14.4 VDC Operating voltage: 11-16 VDC, negative ground Speaker output impedance: 4~8 ohms Line output voltage: 2V Dimensions: 7" x 7" x 2" (178 x 178 x 51 mm)

Design and specifications subject to change without notice




Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage	Check connections for proper voltage (11~16VDC)
	Red wire not connected or incorrect voltage	
	Black wire not connected	Check connection to ground
Unit has power (but no sound)	Fuse blown	Replace fuse
	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuses	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
Excessive skipping	Unit is not mounted correctly or backstrap is not secure	Check mounting sleeve and backstrap support
	Physical defect in media (CD or CD-R)	Check media for scratches
ER02 appears on display	Load/Eject operation error	Press eject or RESET
ER03 appears on display	Focus adjustment error	Clean or replace media
ER04 appears on display	Tracking auto adjustment error	Clean or replace media
ER06 appears on display	Sled operation error	Press eject or RESET
ER07 appears on display	Focus error or disc is in upside down	Press eject or RESET
ER08 appears on display	CLV (PLL) operation error	Press eject or RESET
ER09 appears on display	TOC data read error	Clean or replace media



Namsung America Inc.
21318 64th Ave. South
Kent, WA 98032
Toll Free: 1-866-626-7863

www.dualav.com
©2004 Namsung America, Inc.
EVOK0404-V01

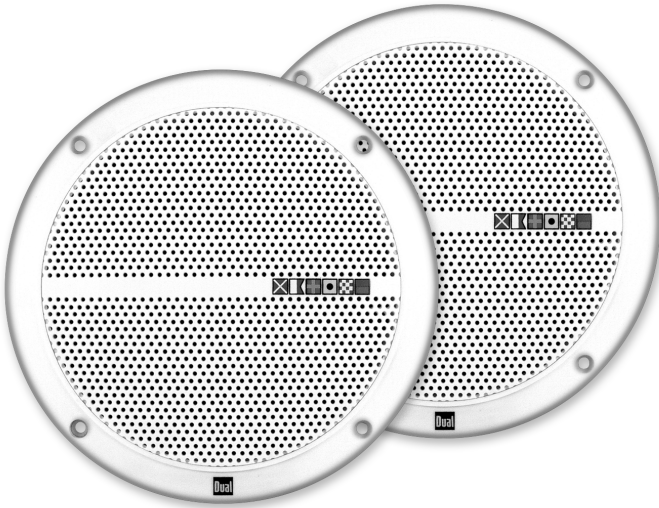

DMP65

INSTALLATION/OWNERS MANUAL

6.5" Dual Cone Marine Speakers





Preparation/Installation


Please read entire manual before installation.

Before You Start

- Disconnect negative battery terminal.
(consult a qualified technician for instructions)
- Use extreme caution when drilling holes to avoid damaging fuel lines, hydraulic lines or existing wiring.

Getting Started

- Determine where the speakers will be mounted. Ensure an area large enough for the speaker to mount evenly. Be sure the mounting location is deep enough for the speaker to fit.
- Using an appropriate tool, cut a 5.13" diameter mounting hole. Route speaker wires and connect to speakers, observing speaker polarity.
- Install speaker into opening using supplied hardware and test for correct operation.

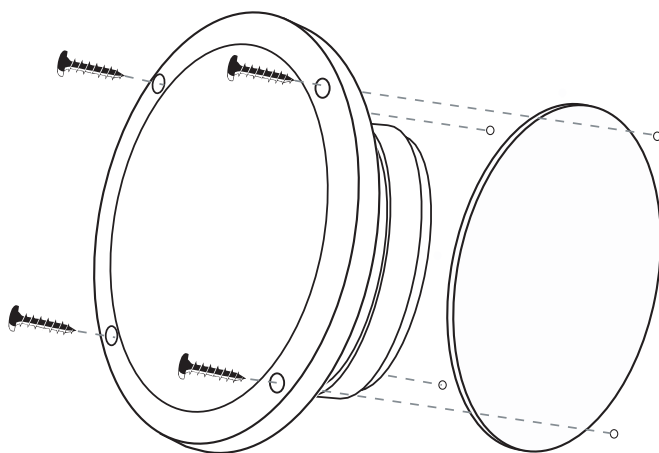

TYPICAL MOUNTING METHOD

Limited One-Year Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Namsung America Inc. warrants this product to the original purchaser to be free from defects in material and workmanship, under normal conditions, for a period of one year from the date of the original purchase.

Namsung America agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new or renewed product in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase.

During the One-Year Warranty Period: For One Year from the date of purchase, your product will be replaced with a new, renewed or comparable product (whichever is deemed necessary) if it becomes defective or inoperative. This is done without charge to you. Replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A., in the 48 contiguous states ONLY.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product.

What to do? If the product requires warranty service, you must prepay the initial shipping charges. DUAL will pay the return shipping charges if the product is returned to an address within the USA.

Namsung America Inc.
Attn: Returns Center
21318 64th Ave. South
Kent, WA 98032 U.S.A.
Toll Free: 1-866-626-7863

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.



DMP65 SPECIFICATIONS

Specifications

Outside Diameter	7.13"
Mounting Depth	2.5"
Mounting Height	.88"
Cut-out Diameter	5.13"
Frequency Response	45Hz-18kHz, ± 3 dB
Sensitivity	90dB 1W/1M
Impedance	4 ohms
RMS Power	20 Watts
Peak Power	60 Watts
	Specifications subject to change without notice



Namsung America Inc.
21318 64th Ave. South
Kent, WA 98032
Toll Free: 1-866-626-7863

©2003 Namsung America, Inc.
EVOK0603-V01